Garden meister

Assembly Instructions

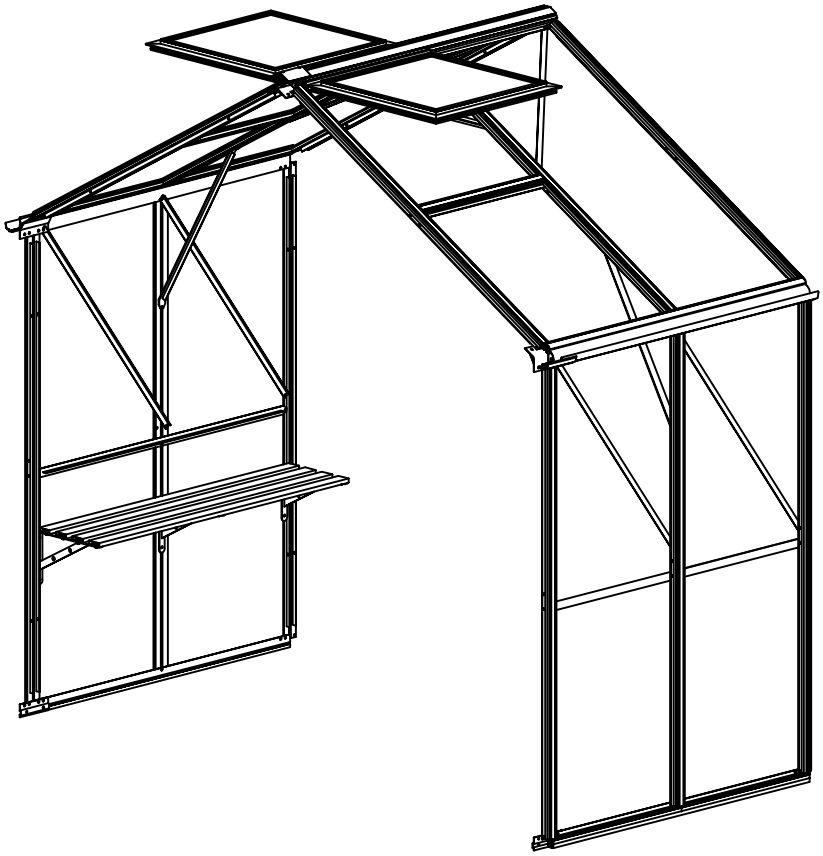

MODEL:GM100100
PRODUCT SIZE(LxWxH):122x35x3cm
PLEASE READ CAREFULLY BEFORE ASSEMBLY

Part	NEW.	OLD.	QTY.
	H39	T01	3
	L30	L03	4
	S16 M6X14	S02	6
	S03 M6X10	S01	12
	M01 M6	M01	18
	Z08 M4.2X16	Z01	6

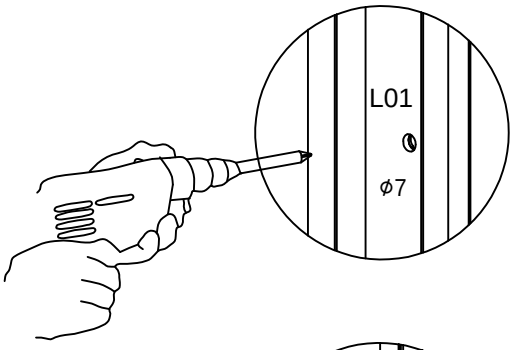

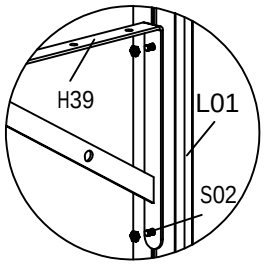

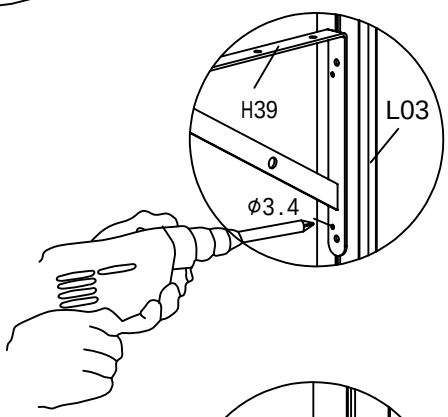

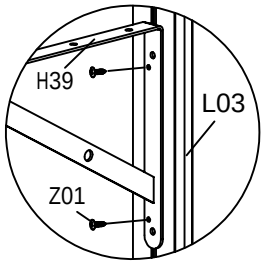

First of all, find out where you want to install the shelving.

If fix the bracket H39 onto L01, drill a hole Dia 7mm with a powered screw-driver on L01, then fix H39 to L01 using the T-shape bolts S16 & nuts M01.

If fix the bracket H39 onto L03, drill a hole Dia 3.4mm with a powered screw-driver on L03, then fix H39 to L03 using screws Z08.

If fix the bracket H39 onto L02, then no need to do any drilling. Just put the T-shape bolts S16 into the slot of L02, and fix the H39 with bolts.

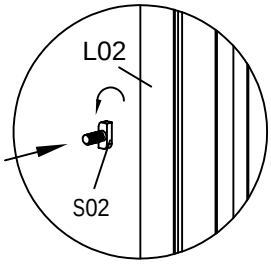

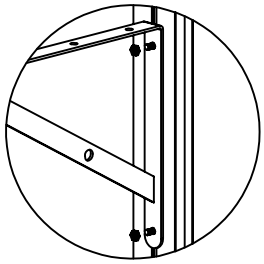

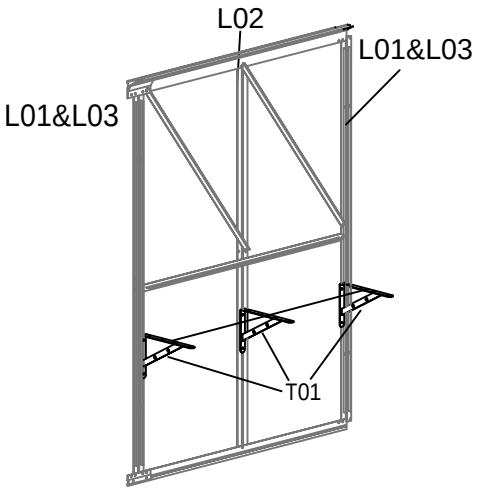

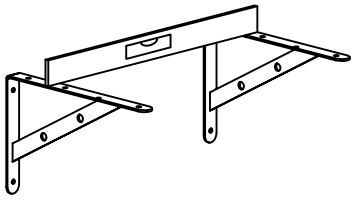

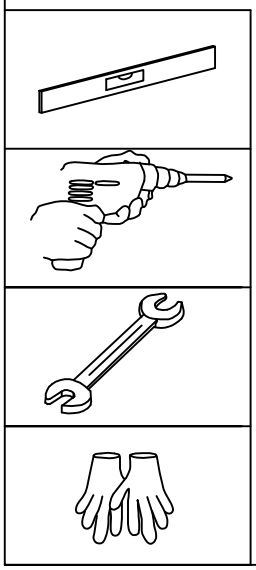

Make sure all the H39 must be on the same horizontal. Use a Spirit Level if necessary.

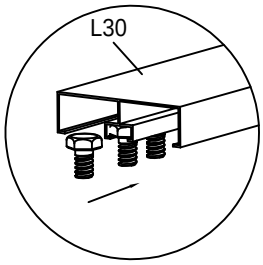

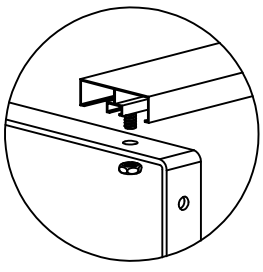
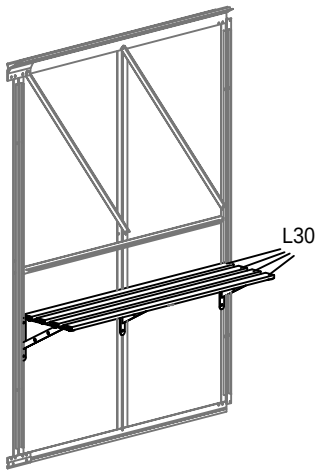
Secure each L30 onto each H39 with bolts & nuts.